



Cleaning:

- › The Guck Nich® privacy screen should be cleaned regularly. You can use clear water in combination with a soft cloth or sponge to remove dirt. If this is not sufficient, use commercially available dishwashing detergents or special cleaning agents for hard PVC surfaces.
- › Please make sure not to use any hard objects for cleaning (e.g. rough sponges, blades, wire brushes/steel wool or similar).
- › Guck Nich® privacy screen must not be cleaned with a high-pressure cleaner.
- › Please do not use surface-destroying cleaners (e.g. abrasive cleaners or other dissolving chemicals such as benzene, nitro thinner, etc.).
- › Discoloration may occur due to pesticides, road salt or similar.

Maintenance:

To care for the Guck Nich® privacy screen, please use only commercially available care products and special pressure-free plastic care and silicone sprays. Before use, please clean the surfaces. Then spray evenly and over the entire surface of the dried Guck Nich® privacy screen strips and rub in with a cloth. Please also observe the processing instructions for the products you have selected.

Exclusion of warranty:

Please note that depending on the climatic conditions, weather influences and the intensity of sunlight, the color impression may change. Likewise, the warranty claim is excluded in case of improper use and mechanical damage (e.g. due to storm, hail, etc.).