

# ASSEMBLY INSTRUCTIONS

## Camas gabion post type 4

### 1. Benötigtes Werkzeug


- Ready mixed concrete / screed mortar
- Water
- Folding ruler
- Spirit level
- 5.5 mm hexagon
- Water pump pliers
- Spade
- Angle grinder & safety glasses

1/2


### 2. Foundations



### 3. Set posts

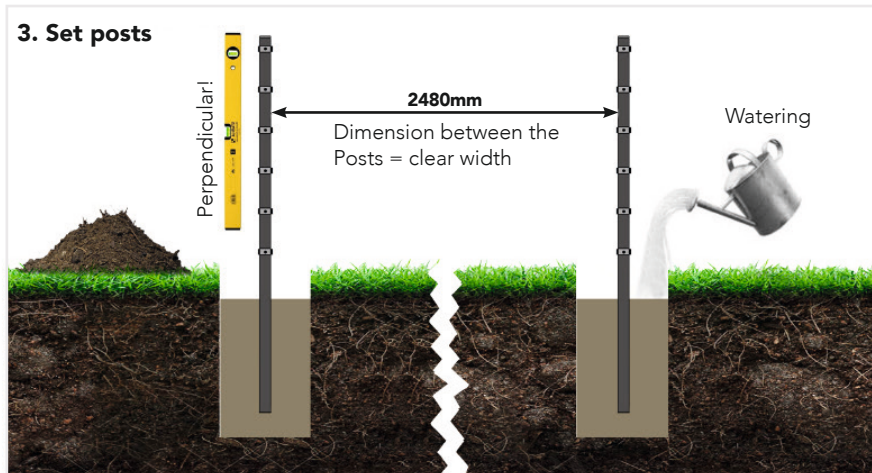


### 4. Fence mounting both sides

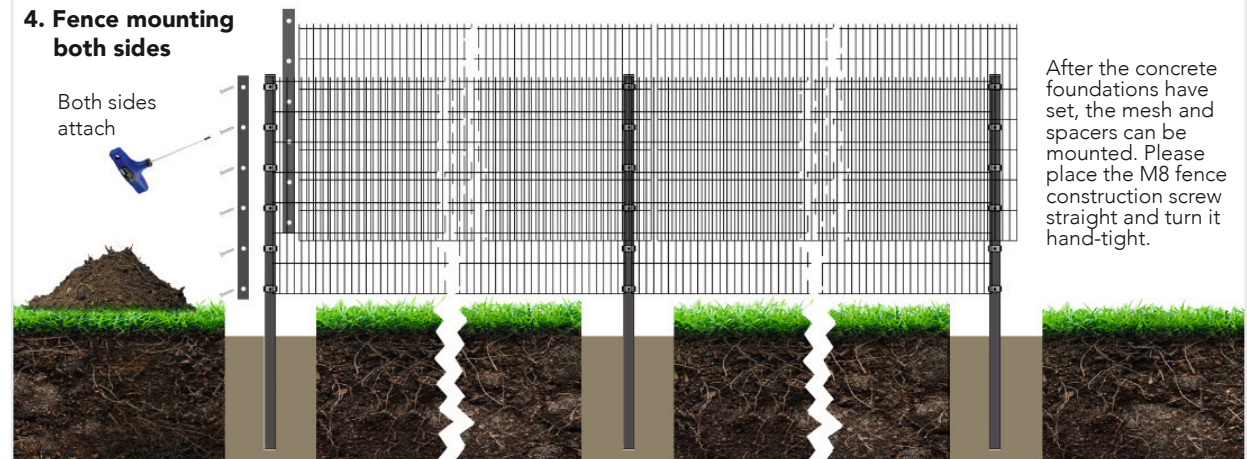


### 5. Setting with slope

With a gradient of more than 10% it is recommended to divide the grids\*.

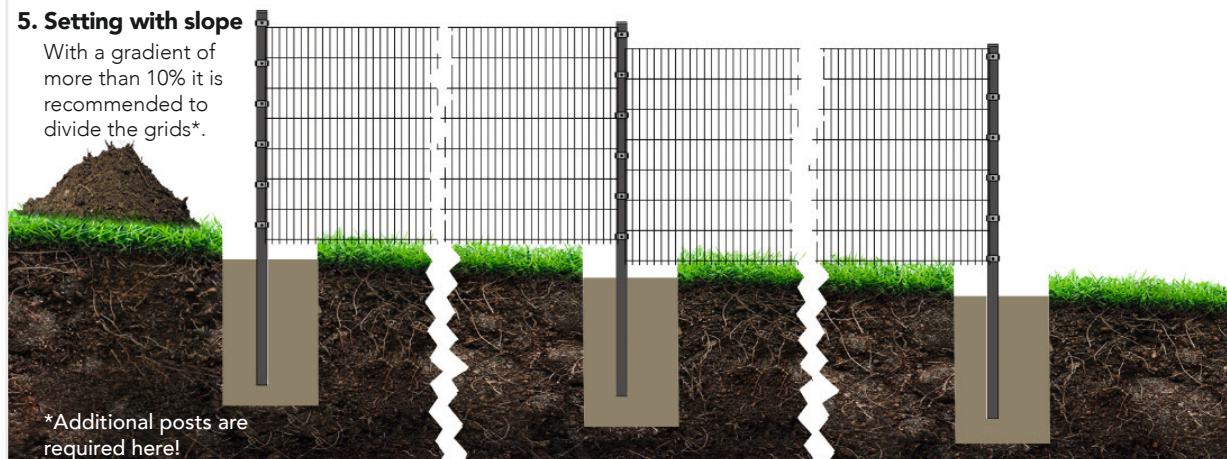

### 6. Installing the spacers

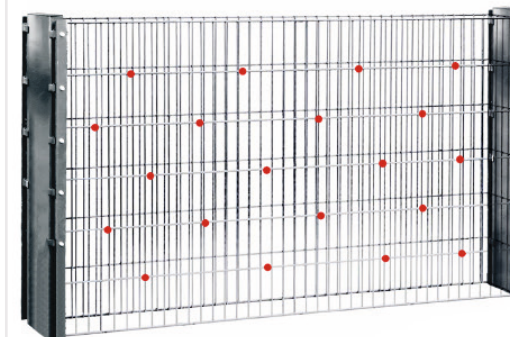

Please refer to the table on the following page for the required number of spacers.



**ATTENTION: Please distribute evenly.**


### 7. Set spacer tightly



### 8. Fill




### 9. Layer by layer straighten the stones by hand

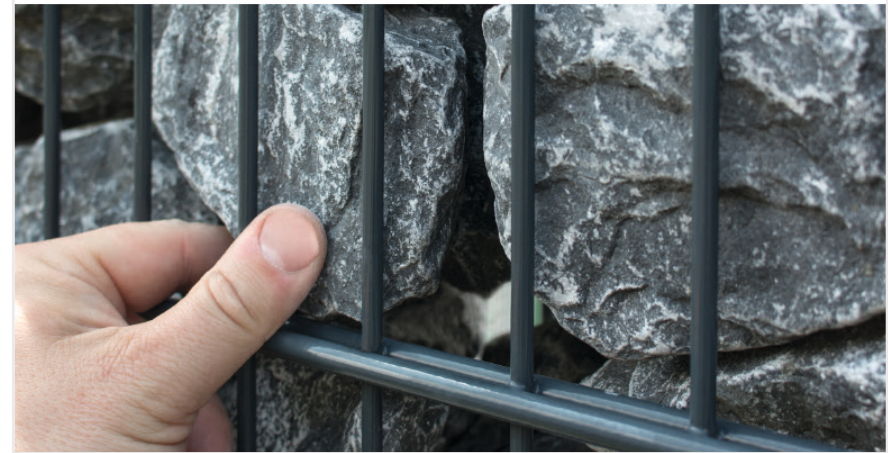

### 10. Corner

On the inside of the double rod mat you should cut out about 3 cm.

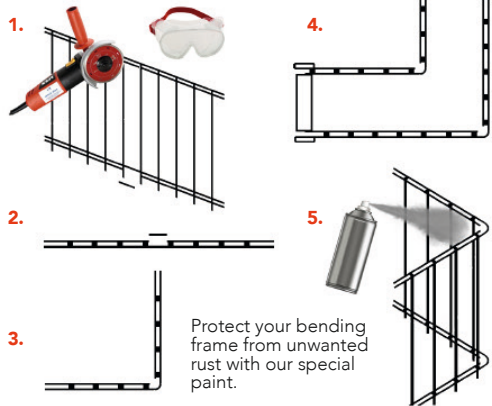

Protect your bending frame from unwanted rust with our special paint.

### Quantity required:

Gabion height	Spacer
630-830 mm	10
1030 mm	15
1230-1430 mm	20
1630 mm	25
1830 mm	30
2030 mm	35
2230 mm	40
2430 mm	45

*Camas gabion  
post type 4* **2/2**



**CAMAS GmbH**  
Am Förderturm 10-12  
D- 44575 Castrop-Rauxel

**E-Mail:** info@camas.de  
**Internet:** www.camas.de

**Tel.:** +49 (0) 2305 – 97 31 40