

ASSEMBLY INSTRUCTIONS

Camas Ben Light gate 1 wing

1. Required tools

- 10 open end wrench
- 19 open end wrench
- 3s hexagon socket
- Screwdriver

1/1


2. Gate suspension fold



3. Prepare suspension



4. Suspension into the door leaf insert

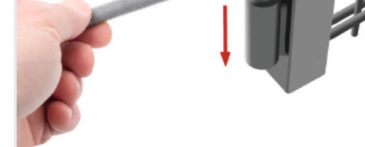

5. Align suspension...



... and insert



6. Fix suspension...



... and screw tight



7. Attach stopper



8. Fix screw...



... and tighten



9. Rubber buffer...



... press inside




10. If the lock does not fit the DIN direction, it can be adjusted like this:

10a.



10b.

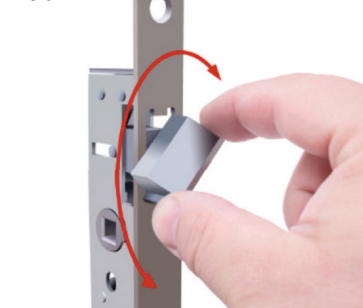

10c.



11. Insert door handle and screw tight



CAMAS®

CAMAS GmbH
Am Förderturm 10-12
D- 44575 Castrop-Rauxel

E-Mail: info@camas.de
Internet: www.camas.de

Tel.: +49 (0) 2305 – 97 31 40