

ASSEMBLY INSTRUCTIONS

Camas Straight Line gate 1 wing

1. Required tools

- 10 open end wrench
- 3s hexagon socket
- 19 open end wrench
- Screwdriver

1/1

2. Put gate suspension together



3. Prepare suspension



4. Insert suspension into the door leaf



5. Align and...



... insert suspension



6. Fix suspension...



... and screw tightly



7. Attach stopper



8. Fix bolt...



... and screw tight



9. Press in...



... rubber buffer




10. If the lock does not fit the DIN direction, it can be adjusted this way:




10a.



10b.

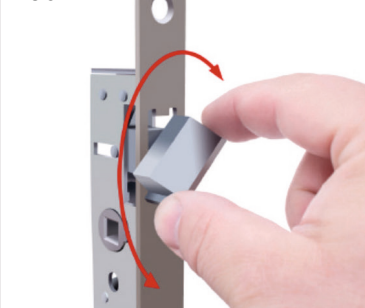

10c.

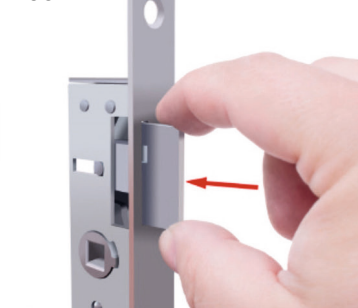

11. Insert door handle and screw tight



CAMAS®

CAMAS GmbH
Am Förderturm 10-12
D- 44575 Castrop-Rauxel

E-Mail: info@camas.de
Internet: www.camas.de

Tel.: +49 (0) 2305 – 97 31 40