
SLIDING GATE SYSTEM

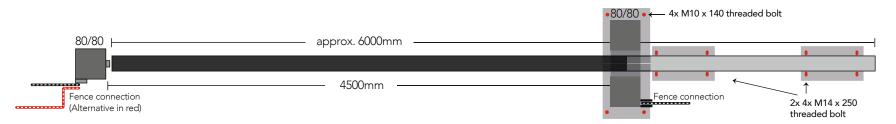

To assemble your new sliding gate system, you will need additional assembly material (not included):

- 4x M10 x 140mm
- 8x M14 x 250mm
- 2K adhesive cartridge

Foundation size **Cast foundation** approx. 600mm approx. 6000mm 4500mm Assembly 2/3 Assembly 2/3 500mm Assembly 1 Foundation depth approx. 600mm approx. 2000mm Foundation depth min. 800mm

The assembly

- Creation of the poured foundation
- Allow foundation to cure for at least 14 days
- Mount continuous posts on the foundation.
- Set up both roller blocks incl. gate
 - ATTENTION: for this you need helpers to hold the gate straight little tip: push the roller packs centrally under the gate and then place it between the guide post.
 - The gate must be centered so that it is balanced on the rollers.

- Firmly mount roller blocks.
 - The dimension for this is given by the rear part of the gate.
 - Mount a roller block directly to the pass-through post.
 - The second roller block should be mounted approx. 100mm before the end of the gate.
- 6. Glue in stud anchor and allow to cure curing time depends on manufacturer. ATTENTION: Adjust the roller blocks so that the sliding gate system is 100% in balance to ensure easy movement of the gate system. It must be possible to open the gate manually with one hand without any problems!
- Now you can close the gate to the desired dimension and set the stop post in concrete there at the height and alignment.

Errors and omissions excepted | Our GTCs apply. | This document may not be photocopied, reproduced or redistributed without permission granted by CAMAS GmbH. | The information contained herein is subject to copyright.

Am Förderturm 10-12 D- 44575 Castrop-Rauxel

E-Mail: info@camas.de Internet: www.camas.de

Tel.: +49 (0) 2305 - 97 31 40 Fax: +49 (0) 2305 - 97 31 429

